

IMF131



2020+ GMC Sierra 2500/3500 HD Denali Mud Flap Installation Instructions







Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

MF131 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF131 SEE PAGE 3 DRAWINGS	PART DESCRIPTION	QUANTITY
MF131-LF-TOP	LEFT FRONT TOP	1
MF131-LF-BOT	LEFT FRONT BOTTOM	1
MF131-RF-TOP	RIGHT FRONT TOP	1
MF131-RF-BOT	RIGHT FRONT BOTTOM	1
MF131-LR-TOP	LEFT REAR TOP	1
MF131-LR-BOT	LEFT REAR BOTTOM	1
MF131-RR-TOP	RIGHT REAR TOP	1
MF131-RR-BOT	RIGHT REAR BOTTOM	1
HARDWARE KIT PN HMF131		
1.5SS6TR 	SCREW	12
HXBLT 	BOLT	16
BLKNUT 	NUT	16
SMWASH 	WASHER	44




2020+ GMC Sierra 2500/3500 HD Denali Mud Flap Installation Instructions

FRONT FLAP Turn steering wheel towards installation side to access interior wheel well. **Do not fully tighten fasteners until flap is aligned to vehicle.** Hardware 1 x Flap → 3 x 1.5SS6TR; 4 x BLKNUT; 4 x HXBLT; 11 x SMWASH

FIGURE A Remove fasteners 1 - 3.

FIGURE B Place logoed side of flap MF131-LF-BOT over MF131-LF-TOP, logo to be registered leftmost on vehicle and facing rear bumper. Place MF131-RF-BOT over MF131-RF-TOP, logo registered rightmost and facing rear bumper. Install SMWASH & HXBLT through logo-side. Fasten SMWASH & BLKNUT on tire-side of flap.

FIGURE C Install SMWASH & 1.5SS6TR into mounts 1 - 3. Align flap to even ground before tightening washers flush to flap.

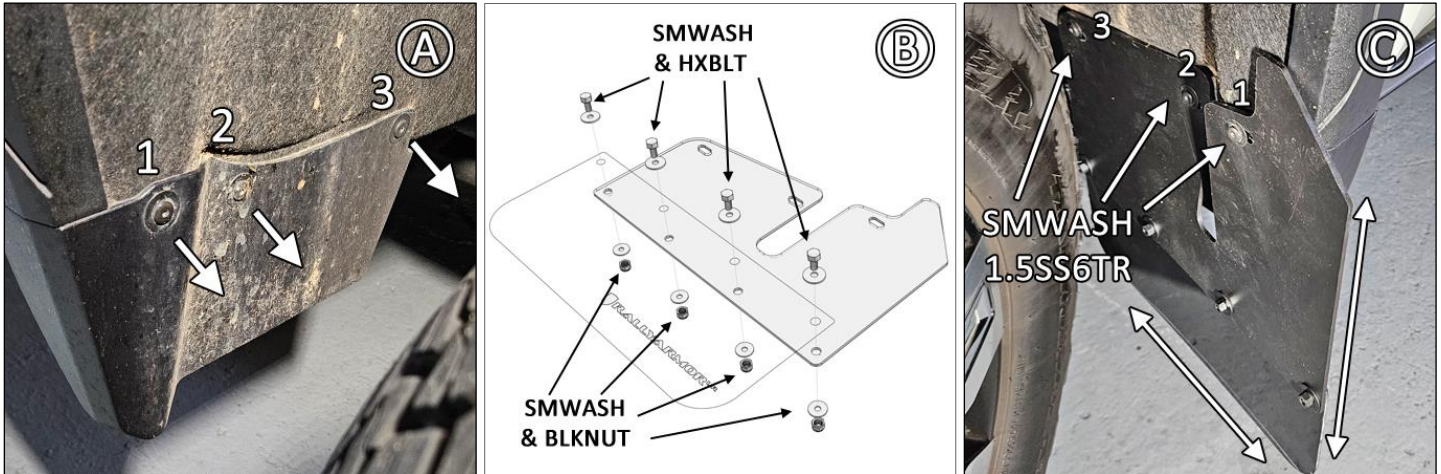


REAR FLAP Do not fully tighten fasteners until flap is fully aligned to vehicle.

Hardware 1 x Flap → 3 x 1.5SS6TR; 4 x BLKNUT; 4 x HXBLT; 11 x SMWASH

FIGURE D Remove fasteners 1 - 3.

FIGURE E Place logoed side of flap MF131-LR-BOT over MF131-LR-TOP, logo to be registered leftmost on vehicle and facing rear bumper. Place MF131-RR-BOT over MF131-RR-TOP, logo registered rightmost and facing rear bumper. Install SMWASH & HXBLT through logo-side. Fasten SMWASH & BLKNUT on tire-side of flap.

FIGURE F Install SMWASH & 1.5SS6TR into mounts 1 - 3. Align flap to even ground before tightening washers flush to flap.

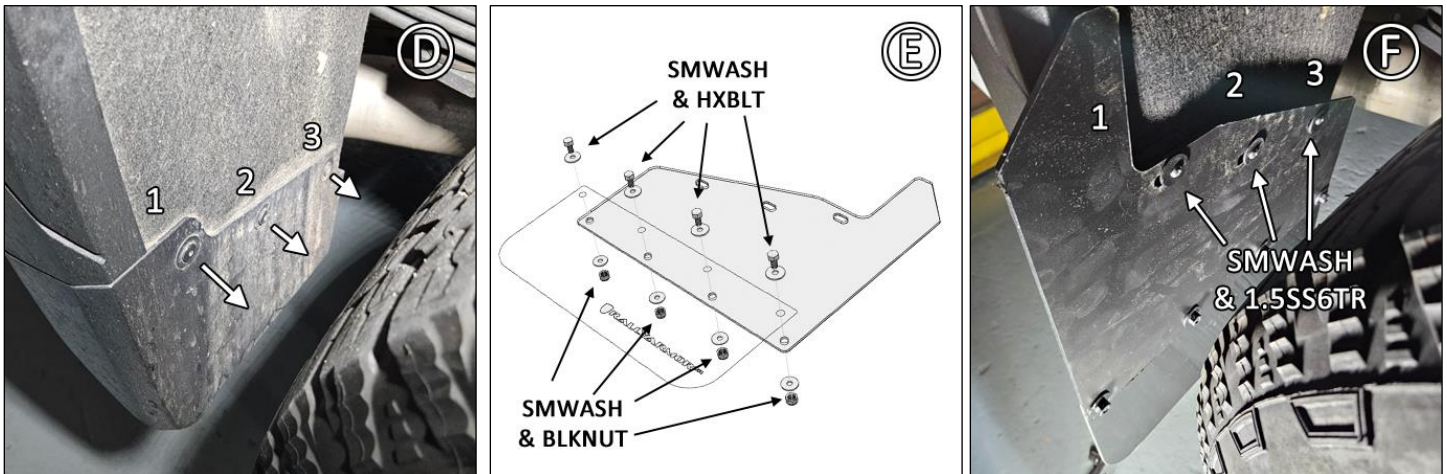



2020+ GMC Sierra 2500/3500 HD Denali Mud Flap Installation Instructions



FRONT

MF131 MOUNTING DIAGRAM

REAR

