



2021+ Dodge Ram 1500 TRX Installation Instructions View online www.rallyarmor.com







Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.
ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

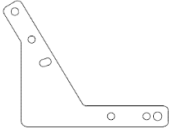ABOUT OUR STANDARD Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

MF128 KIT CONTENTS CONFIRM ALL PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF128 SEE PAGE 3	PART DESCRIPTION	QUANTITY
MF128-LF	LEFT FRONT	1
MF128-RF	RIGHT FRONT	1
MF128-LR	LEFT REAR	1
MF128-RR	RIGHT REAR	1
BRACKET KIT PN BMF128		
BMF128-1 	BRACKET FRONT & REAR	4
HARDWARE KIT PN HMF128		
BLKNUT 	NUT	2
HXBLT 	BOLT	2
SMWASH 	WASHER	4

Do not fully tighten fasteners until flaps are completely aligned to vehicle.

FRONT FLAP Turn steering wheel towards installation side to access interior wheel well.

Bracket 1 Flap → 1 x BMF128-1


IMAGE A Temporarily remove fasteners 1 - 4.

IMAGE B Place logo-side of flap facing rear bumper and BMF128-1 over side facing tire. Reinstall fasteners into BMF128-1 & flap mounts 1 – 4.

IMAGE C Ensure flap is parallel to even ground. Adjust preferred width before hand-tightening washers just until flush to flap.



2021+ Dodge Ram 1500 TRX Installation Instructions View online www.rallyarmor.com

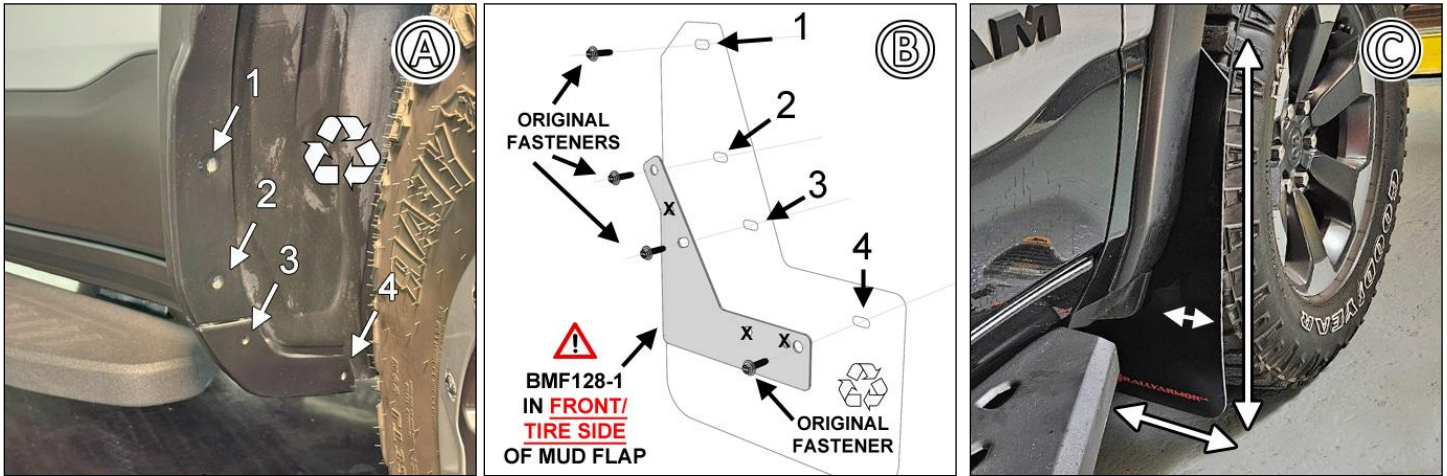


REAR FLAP Bracket/Hardware 1 Flap → 1 x BMF128-1; 1 x BLKNUT; 1 x HXBLT; 2 x SMWASH

IMAGE D Temporarily remove fasteners 1 - 4.

IMAGE E Place BMF128-1 over flap side facing tire. Logo-side of flap faces rear bumper. Reinstall fasteners into mounts 1 – 4. Install SMWASH & HXBLT through BMF128-1 mount 5 and SMWASH & BLKNUT onto its reverse side. Mount 5 does not mount onto vehicle.

IMAGE F Ensure mud flap is parallel to even ground. Adjust preferred width before hand-tightening washers just until flush to flap.

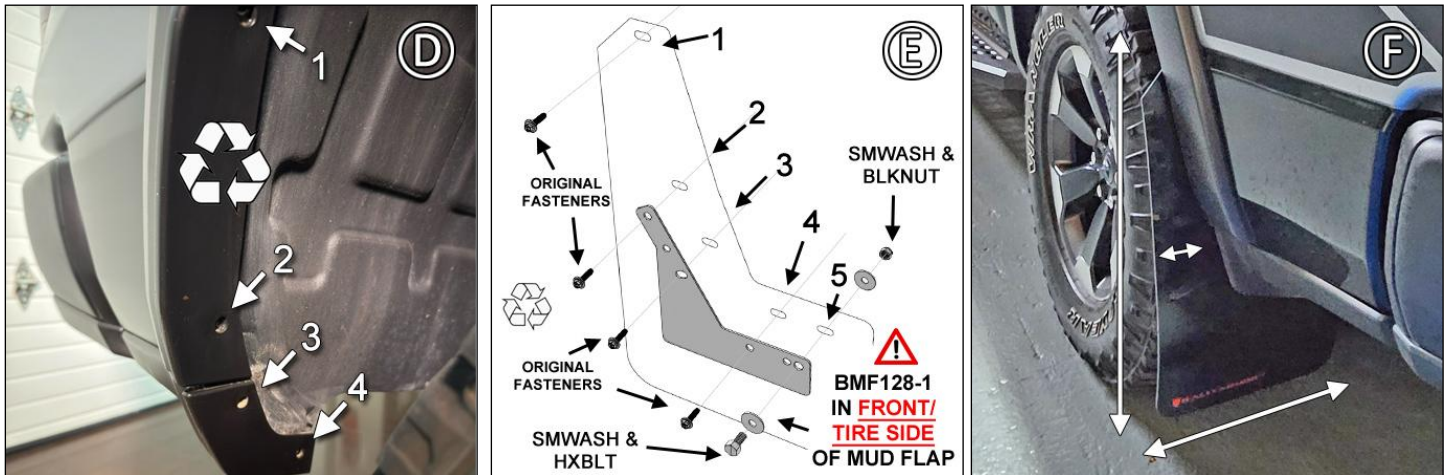



MF128 MOUNTING DIAGRAM

