

IMF98



2019+ Dodge Ram 1500 Rebel Installation Instructions View online www.rallyarmor.com










Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

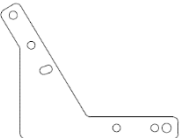Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.
ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

MF98 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT PN MF98 SEE PAGE 3		PART DESCRIPTION	QUANTITY
MF98-LF		LEFT FRONT	1
MF98-RF		RIGHT FRONT	1
MF98-LR		LEFT REAR	1
MF98-RR		RIGHT REAR	1
BRACKET KIT PN BMF98			
BMF98-1		BRACKET FRONT	2
BMF128-1		BRACKET REAR	2
HARDWARE KIT PN HMF98			
1SS		SCREW	2
BLKNUT		NUT	2
HXBLT		BOLT	2
SMWASH		WASHER	6
UCLP		CLIP	2



2019+ Dodge Ram 1500 Rebel Installation Instructions View online www.rallyarmor.com


FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side. **Do not fully tighten fasteners until mud flap is completely aligned to vehicle.**

Bracket/Hardware 1 Flap → 1 x BMF98-1; 1 x 1SS; 1 x SMWASH; 1 x UCLP

IMAGE A Uninstall fasteners 1 - 4. Move liner aside, then install UCLP over mount 4. Replace liner.

IMAGE B Position logo-side of flap facing rear bumper and BMF98-1 over flap side facing tire mounts 2 - 4. Reinstall original fasteners into mounts 1 – 3. Install SMWASH & 1SS into mount 4.

IMAGE C Ensure flap is parallel to even ground. Adjust preferred width before tightening washers just until flush to flap.

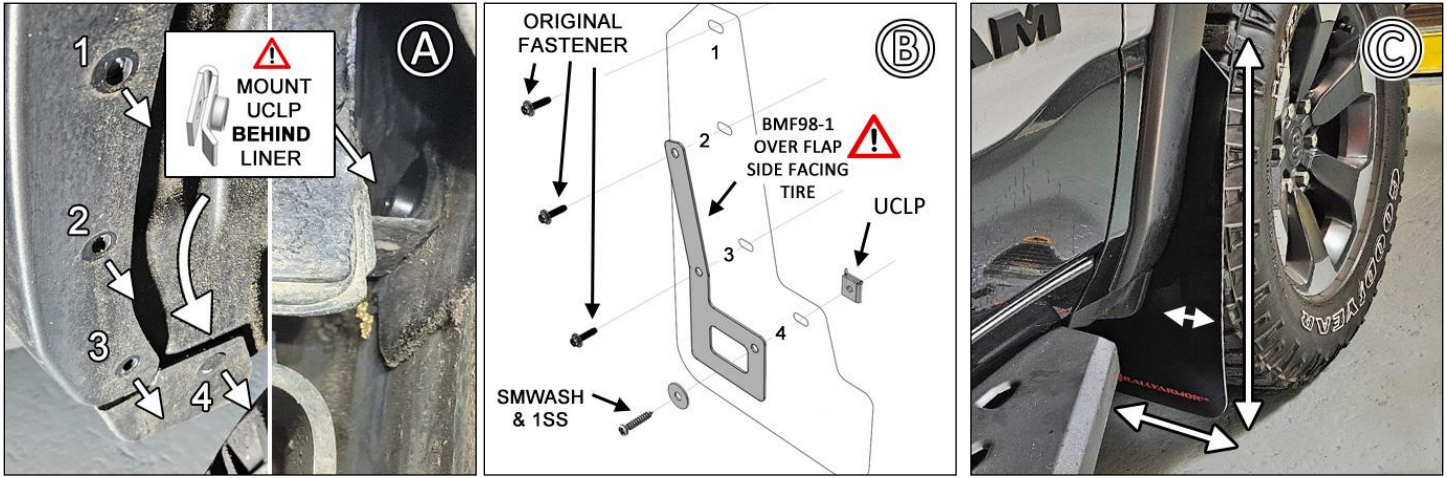


REAR FLAP **Bracket/Hardware 1 Flap** → 1 x BMF128-1; 1 x BLKNUT; 1 x HXBLT; 2 x SMWASH

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

IMAGE D Uninstall fasteners 1 - 4.

IMAGE E Position logo-side of flap facing rear bumper. Reinstall original fasteners into flap mounts 1 & 2. Position BMF128-1 over flap mounts 3 & 4 and reinstall original fasteners. Install SMWASH & HXBLT through BMF128-1 mount 5 and SMWASH & BLKNUT onto its opposite side. Mount 5 does not mount into vehicle.

IMAGE F Ensure flap is parallel to even ground. Adjust preferred width before tightening washers just until flush to flap.

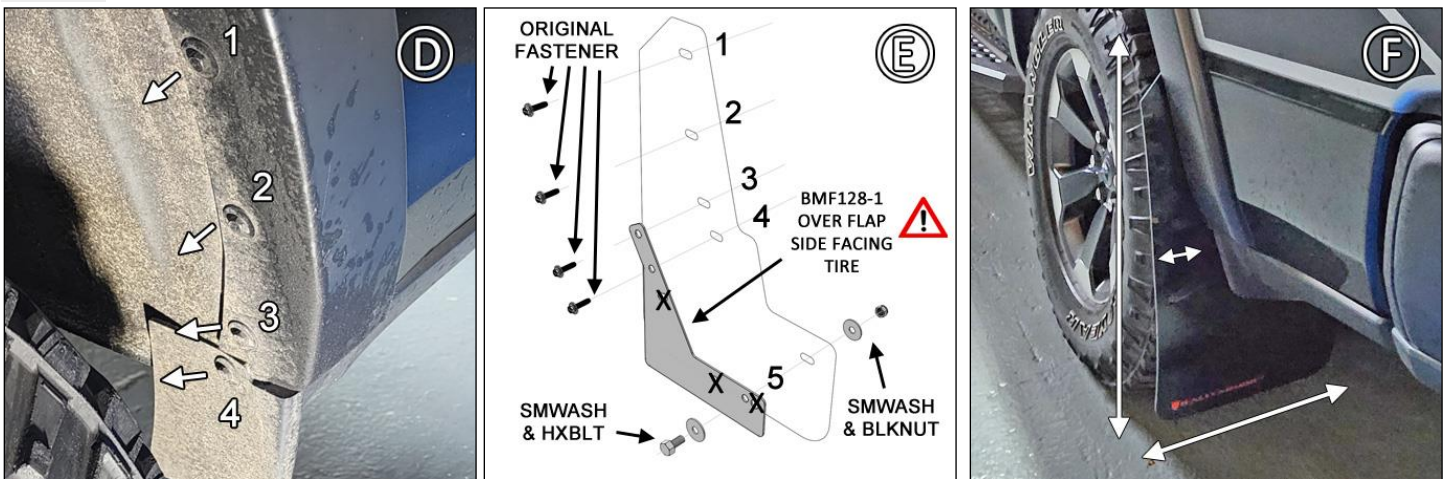



MF98 MOUNTING DIAGRAM

